



Built-In Electric Fireplace

Instruction Manual

MODEL NAME: **CONTINENTAL**



AC 220V 50Hz



WARNING

Read and understand this entire owner's manual, including **all safety information**, before **plugging in** or **using** this product. Failure to do so could result in **fire, electric shock, or serious personal injury**.



CAUTION

Keep this owner's manual for future reference. If you sell or give this product away, **make sure this manual accompanies this product**.



IMPORTANT SAFETY INFORMATION!

WARNING

- Read all instructions before using this fireplace!
- **DO NOT** operate any fireplace with a **damaged cord or plug** or after the **fireplace malfunctions**, has been **dropped** or **damaged in any manner**. Discard fireplace, or return to authorized service facility for examination and/or repair.
- **DO NOT** run **power cord** under carpeting. **DO NOT** cover power cord with throw rugs, runners, or similar coverings. **DO NOT** route power cord under furniture or appliances. Arrange power cord **away from traffic** area, and where it will not be tripped over.
- **Connect to properly grounded outlets ONLY.**
- A fireplace has **hot and arcing or sparking parts inside**. **DO NOT** use it in areas where **gasoline, paint, or flammable liquids** are used or stored.
- **Use this fireplace only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.**
- **ALWAYS** plug fireplaces directly into a wall outlet/receptacle. **NEVER** use with an extension cord or relocatable power tap (outlet/power strip).
- **NEVER** use this fireplace in **bathrooms, laundry rooms**, or any other location where the fireplace could fall into a **bathtub** or **pool**, **become damp**, or **come in contact with water**.
- **ALWAYS** mount to wall bracket before use. **DO NOT** set on the floor, or other surface, to use.
- **NEVER** use a wall mount bracket from another manufacturer.
- **INDOOR use only! NEVER** use this fireplace **outdoors!** Doing so may result in **electric shock!**
- **Risk of electric shock! DO NOT OPEN!** No user-serviceable parts inside!
- **ALWAYS** turn this fireplace off before unplugging it from the outlet.
- **ALWAYS** **disconnect** this unit from the **power** supply **before** performing any assembly or cleaning, or before relocating the electric fireplace.
- **NEVER** leave this fireplace unattended. **ALWAYS** unplug this fireplace when not in use.
- **ALWAYS** store this fireplace in a dry location. **NEVER** use the fireplace if it has become wet.
- **NEVER** plug this fireplace into an outlet that is **old, cracked**, or has any **loose wires or connections**. Plugging this fireplace into a faulty outlet could result in **electric arcing** within the outlet that could cause the **outlet** to **overheat or catch fire**.
- **ALWAYS** check your fireplace cord and plug connections with **each use!**
 - i) **MAKE SURE** the plug fits tight in the outlet! Faulty wall outlet connections or loose plugs can cause the outlet to overheat.
 - ii) **fireplaces draw more current** than small appliances. **Overheating** may occur even if it has not occurred with the use of other appliances.

- iii) During use **check frequently** to see if the **plug outlet or face plate is HOT!**
- iv) If the outlet or face plate is **HOT**, **discontinue use immediately** and have a qualified electrician inspect and/or replace the faulty outlets.

- **SAVE THESE INSTRUCTIONS!**

Preparation

 



This product includes a **GLASS panel!** Always use **extreme caution** when handling **glass**. Failure to do so could result in **personal injury** or **property damage**.


Remove all parts and hardware from the carton and place them on a clean, soft, dry surface. Parts and assembly steps are grouped for recessing use. Check the parts list to make sure nothing is missing. Dispose of packaging materials properly. Please recycle whenever possible.

You will need the following tools (not included): Phillips screwdriver; stud finder; level; tape measure; electric drill; 1/4" wood drill bit, hammer.

Parts and Hardware

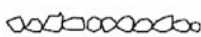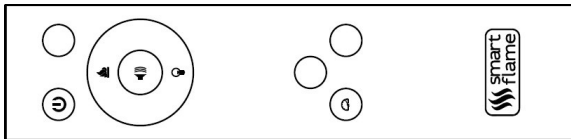 Fireplace			
		Decorative Crystals-Small	Log set
			
	Remote Control		Plastic Tray

Specification and Dimension

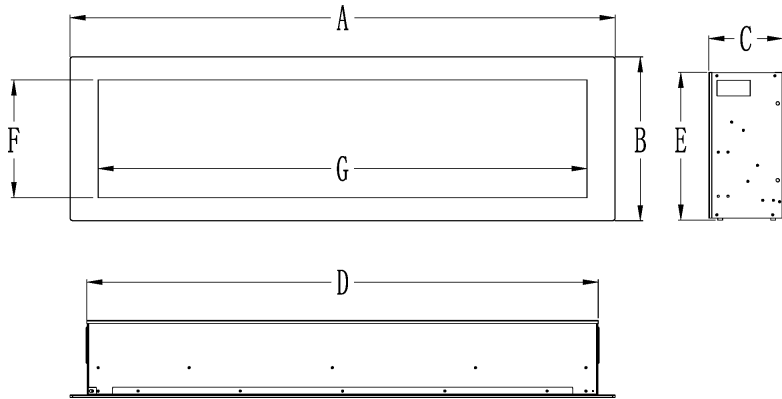

Description	Electric Fireplace
Type	2 Way Mounting Unit Recess into Wall and Assemble with mantel
Voltage	220V AC
Watts	20W-35W
Amps	15 AMP Grounded Circuit

PRODUCT DIMENSIONS


Model Number	A	B	C	D	E	F	G
Continental 102cm	102cm	20.8cm	15cm	99.2cm	18.8cm	13.8cm	95cm
Continental 106.6cm	106.6cm	32cm	15cm	100cm	28.9cm	23cm	95.9cm
Continental 128cm	128cm	32cm	15cm	121.4cm	28.9cm	23cm	117cm
Continental 152.4cm	152.4cm	32cm	15cm	150cm	28.9cm	23cm	143.4cm
Continental 183cm	183cm	32cm	15cm	178.6cm	28.9cm	23cm	174cm

Installation and Assembly

Your appliance is a recessed and/or mantel installed appliance.

NOTE: Follow all National and local electrical codes.


RECESSED TO WALL INSTALLATION

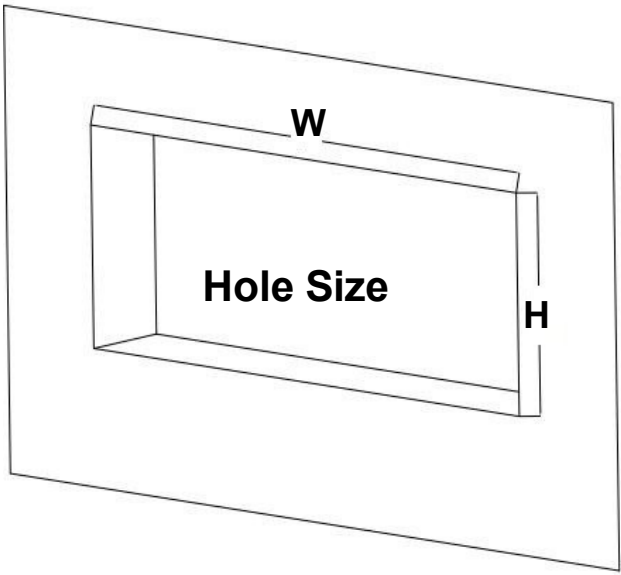

(A)


STEP A. Select a dry wall to open a hole for fireplace box. Size of hole as below chart **Figure (A)**

Framing Hole Size		
Model Number	W	H
Continental 102cm	(100.5CM)	(19.5CM)
Continental 106.6cm	(101.5CM)	(30.4CM)
Continental 128cm	(122.9CM)	(30.4CM)
Continental 152.4cm	(151.5CM)	(30.4CM)
Continental 183cm	(180CM)	(30.4CM)

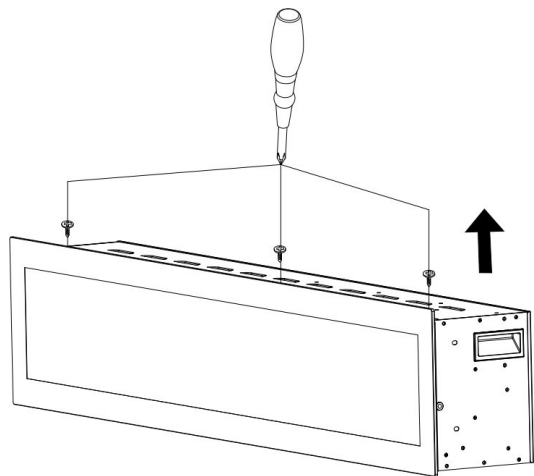


Continental 102cm only

TS4 × 8mm (7PCS)

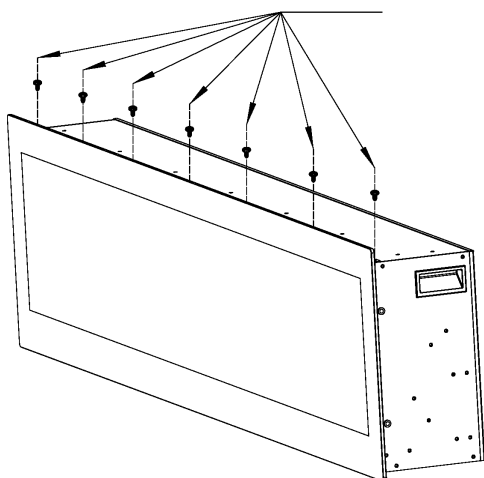

(B) Continental 128cm, 152.4cm, 183cm

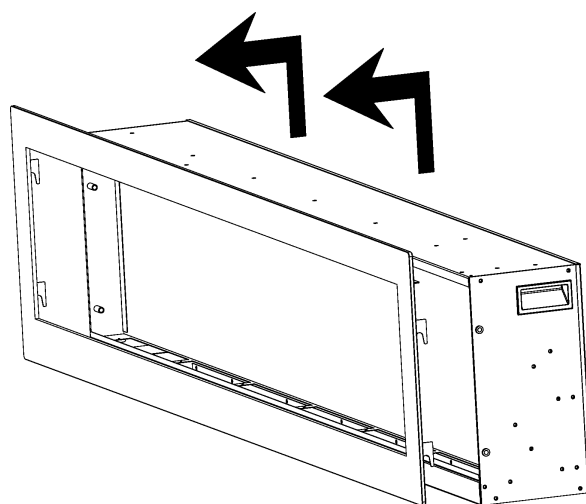

(C)



STEP B. Take off the seven screws on the top of the glass panel. **Figure (B)**

STEP C. Have two persons to take the glass panel out of the fireplace box. Place it to a soft and clean place. **Figure (C)**

- Use the 7 screws (provided) to lock the appliance into the wall, see **Figure (E)**
- Install the media and re-install the front glass.

STEP E. Have two persons to move the fireplace box to the wall hole.



STEP F. Fireplace will be like this after installation **Figure (F)**

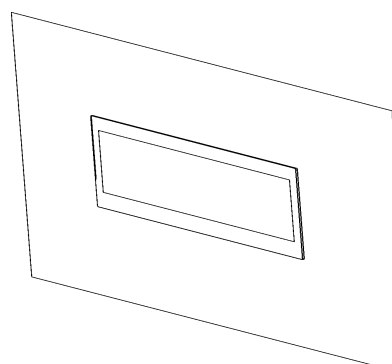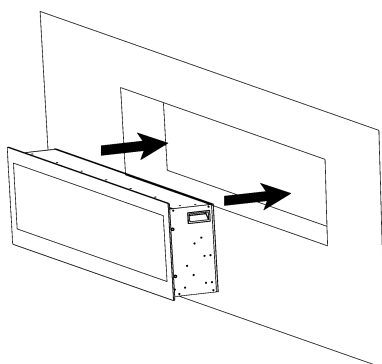

Logset / Crystal Ember Installation

(NOTE: Please make the installation according to the embers which you bought or selected.)

- A. Glass front must be removed and the appliance must be mounted in its final location before the logset / crystal embers are installed.
- B. If your fireplace come with logset, remove the logset from the package, put it to the fireplace designed place.
- C. If your fireplace come with CLEAN CRYSTAL MEDIA: Crystal media may have a fine oil residue that needs to be cleaned prior to installation. Clean them with mild dish soap, drain, rinse thoroughly and dry before placing into the tray.
- D. Place the plastic tray (I) to the fireplace designed place. Then carefully place crystal embers into the bottom tray on the front of the appliance as illustrated. Apply an even layer from side to side.

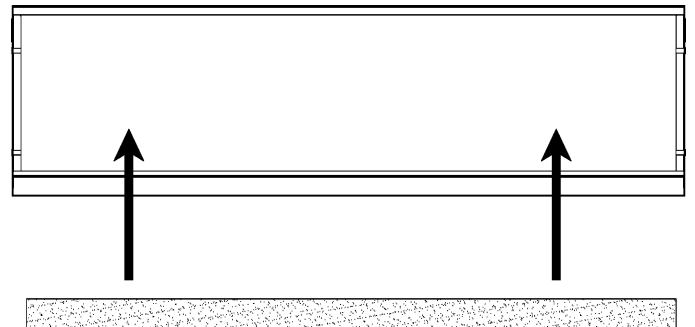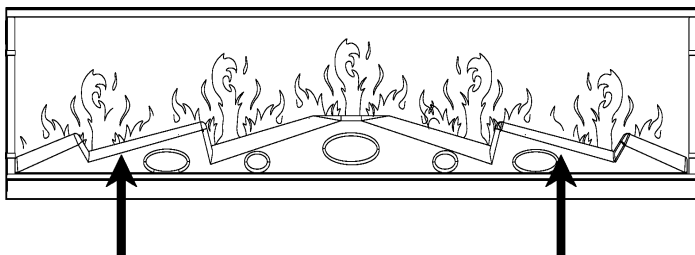

Operation




Read and understand this entire owner's manual, including **all safety information**, before **plugging in** or **using** this product. Failure to do so could result in **electric shock, fire, serious injury, or death.**

Power

Plug the power cord into a 220~240 Volt 15 Amp grounded outlet (see **IMPORTANT SAFETY INFORMATION** on **Pages 2 and 3**). Make sure the outlet is in good condition and that the plug is not loose. **NEVER** exceed the maximum amperage for the circuit. **DO NOT** plug other appliances into the same circuit.

Methods of Operation

Before operating, please review the **IMPORTANT SAFETY INFORMATION** on **Pages 2 and 3**, and heed all warnings.

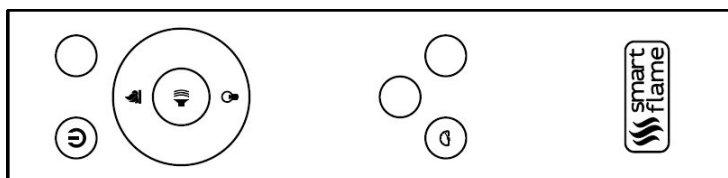

Remote control

Remote Control Operation

BUTTON	FUNCTION	ACTION & INDICATION
 POWER	ON: Enables control panel functions and remote control. Turns on flame effect. OFF: Disables control panel functions and remote control. Turns off flame effect.	1. Press once: Indicator light turns on. Power turns on. All functions enabled. 2. Press again: Flame effect turns off. Unit goes to standby. All functions turn off.
 FLAME	FLAME button: Makes flame effect dimmer and brighter. NOTE: Flame effect stays on until power button is turned off. Flame effect must be on for fireplace to turn on.	1. Press once: Flame brightness effect gets changing. 2. Press again: until desired setting is reached.

 COLOR	COLOR button: Makes the color flame effect changing. NOTE: color effect stays on until power button is turned off. Color flame effect must be on for fireplace to turn on. NOTE: this fireplace is with memory function for flame.	1. Press once: Flame color effect gets changing. 2. Press again: until desired setting is reached.
	Fire cracker sound button: Controls the sound of the cracker. There are 3 settings: 01 (High Volume), 02 (Low Volume), 03 (OFF)	1. Press once: Fire cracker sound gets changing. 2. Press again: until desired setting is reached.
	Flame speed button: Controls the speed of the flame. There are 4 flame speed settings: 01 (slowest), 02 (Medium), 03 (fast), 04 (fastest)	1. Press once: Flame speed gets changing. 2. Press again: until desired setting is reached. Flame display shows the setting. The Default setting is 02 (medium speed)

NOTICE

To improve operation, **aim** the remote control at the front of the fireplace. **DO NOT press the buttons too quickly.** Give the unit time to respond to each command.

Remote Control Battery Information

- remote control uses two **AAA** batteries (**Not Included**)




NEVER dispose of batteries in **fire**. Failure to observe this precaution **may result in an explosion**. Dispose of batteries at your local hazardous material processing center.

Bluetooth Speaker Connection

This appliance is equipped with Bluetooth audio speaker. They do not require an App and will play music on the mobile device as a wireless speaker.

1. Once the appliance is plugged in, use your mobile device to search for the Bluetooth signal called “Bluetooth” .
2. Connect with the “Bluetooth” signal. You will hear sounds from the appliance if the connection is successful.

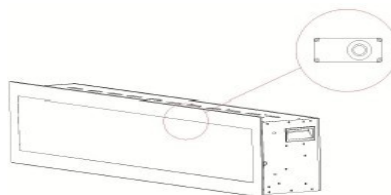

Care and Maintenance

Cleaning



ALWAYS turn the fireplace **OFF** and **unplug the power cord from the outlet** before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in **electric shock, fire, or personal injury**.



NEVER immerse in water or **spray with water**. Doing so could result in **electric shock, fire, or personal injury**.

Metal:

- Buff using a soft cloth, slightly dampened with a citrus oil-based product.
- **DO NOT** use brass polish or household cleaners as these products will damage the metal trim.

Glass:

- Use a good quality glass cleaner sprayed onto the cloth or towel. Dry thoroughly with a paper towel or lint-free cloth.
- **NEVER** use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface.

Vents:

- Use a vacuum or duster to remove dust and dirt from the fireplace and vent areas.

Plastic:

- Wipe gently with a slightly damp cloth and a mild solution of dish soap and warm water.
- **NEVER** use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface.

Maintenance



Risk of electric shock! DO NOT OPEN any panels ! No user-serviceable parts inside!



ALWAYS turn the fireplace **OFF** and **unplug the power cord from the outlet** before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in **electric shock, fire, or personal injury**.

Electrical and Moving Parts:

- The fan motors are lubricated at the factory and will not require lubrication.
- Electrical components are integrated in the fireplace and are not serviceable by the consumer.

Storage:

- Store fireplace in a clean dry place when not in use.



WARNING! NO SERVICING of the internal or electrical parts should be performed by the consumer. Do not service the unit yourself.